

#### RECHARGEABLE

# FOLDABLE SLIMLIGHT

# INSTRUCTION



Manuals in

DE IT FR www.steinemann.ag

Art. 940000874

#### **EN OPERATING INSTRUCTIONS**



Many thanks for choosing a product from "asphalt". With the following Instructions, we would like to help you to get the best functions of your new light.

Keep this instruction manual for future reference or for subsequent possessors.

## (i) TECHNICAL DATA

Light Source	high power COB LED – Main light high power SMD LED – Top light
Luminous Power	ca. 60-700 lm – Main light(Min-Max) ca. 120 lm – Top light
Operating time	ca. 16-2h – in light full power mode ca. 9h – Top light
Battery Specification	Li-lon 3.7 V, 2600 mAh, 9.62 Wh
Charging Time	ca. 4 h
Charging Input	DC 5V 1A
Degree of protection	IP 54, IK 07
Operating temperature	−10°C to +40°C

#### **A** WARNING

- Do not open the device.
- Do not look directly into the light emitting lamp Risk of eye injuries!
- Do not operate in direct sun light or extreme temperature conditions.
- Operating temperature, -10° C to +40° C
- Keep away from children! Children should be supervised in order to ensure that they do not play with the device!

#### **| OPERATING & CHARGING PROCEDURE**

- · Operating mode as below
  - -Press the Switch longer than 0.5 second, top light switch on.
  - -Press the Switch second time, main light switch on. Adjust the dimming switch to change brightness of the main light.
  - -Press the Switch longer than 0.5 second, whole light switch off.
- Switch lamp off and connect with USB charger during charging. The battery indicator will blink during charging.
- All the battery indicator will stay lighting up after finished the charging. If the battery indicator did not light up, please remove the charger and try again.
- Always only use the charger recommended by charing the lamp. The use of a NON-recommended charger can lead to a fire and destroy the lamp.
   Before taking the hand lamp into service for the first time charge it for 4-5 h.
- Fully charge the hand lamp before it is stored for a longer period.

## (!) SAFETY INSTRUCTIONS

- Do not use the device if there is damage to the housing, plug or cable.
  Consult
- your local authorized specialist!
  Do not open the device! Repair work and replacing the rechargeable battery
- pack may only be carried out by electricians.
  Carry out cleaning tasks only when the mains plug is removed from the
- mains
  power!
  - There is a risk of short-circuit. Repairs on the device may only be carried out
- by commissioned and trained persons. Please contact your nearest authorized branch.
- Protect the battery against heat, e. g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.
   If the battery is damaged or not used correctly. Fluids can leak from the battery. Avoid contact with these. Leaking battery fluids can lead to skin
- irritation or burns. Rinse off with water if you should come into contact. If the fluid gets into your eyes,make sure you get medical help.
   The lamp is not allowed to be placed on the light surface while being

# Environmental Protection

waste under any circumstances.

switched on

- The device should not be discarded in the normal household
- Dispose of the device via an authorized disposal center or your communal waste disposal facility. Observe the current applicable



regulations. Contact your waste disposal facility in the event of any doubt. Dispose of all packaging materials via an environmentally friendly disposal facility. Rechargeable batteries must not be disposed of in the household waste.

Return used rechargeable batteries to your dealer or hand them in to a battery collection facility.



 The device has a two years WARRANTY against faulty workmanship or materials. The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.

Subject to technical changes. We assume no liability for printing errors.

