

ASPHALT™

RECHARGEABLE TWINBEAM POCKET WORKLIGHT

INSTRUCTION



Manuals in

   on:

www.steinemann.ag

Art. 940000876

OPERATING INSTRUCTIONS



Many thanks for choosing a product . With the following Instructions, we would like to help you to get the best functions of your new light.
Keep this instruction manual for future reference or for subsequent possessors.

TECHNICAL DATA

Light Source	high power COB LED – Spotlight high power COB LED – Floodlight
Luminous Power	ca. 1400 lm – Floodlight Full Power Mode ca. 700 lm – Floodlight Normal Mode ca. 350 lm – Floodlight ECO Mode ca. 400 lm – Spotlight
Operating time	ca. 3h – Floodlight Full Power Mode ca. 4.5h – Floodlight Normal Mode ca. 7h – Floodlight ECO Mode ca. 6.5h – Spotlight
Battery Specification	Li-Ion 3.7 V, 5200 mAh, 19.24 Wh
Charging Time	ca. 4 h
Charging Input	DC 5V 2A
Degree of protection	IP 65, IK 07
Operating temperature	-10°C to +40°C

WARNING

- Do not open the device.
- Do not look directly into the light emitting lamp - Risk of eye injuries!
- Do not operate in direct sun light or extreme temperature conditions.
- Operating temperature, -10° C to $+40^{\circ}$ C.
- Keep away from children! Children should be supervised in order to ensure that they do not play with the device!


OPERATING & CHARGING PROCEDURE

- Operating mode as below
 - Press the switch first time, Spotlight switch on.
 - Press the switch second time, Floodlight switch to ECO Mode.
 - Press the switch third time, Floodlight switch to Normal Mode.
 - Press the switch fourth time, Floodlight switch to Full Power Mode.
 - Press the switch fifth time, whole light switch off.
- Switch lamp off during charging.
- The LED of the indicator switches to red during charging.
- If charging is completed, green LED illuminate will turn on.
- Always only use the charger recommended to charge the lamp. The use of a NON-recommended charger can lead to a fire and destroy the lamp. Before
- taking the hand lamp into service for the first time charge it for 4-5 hours.
- Fully charge the hand lamp before it is stored for a longer period.

SAFETY INSTRUCTIONS

- Do not use the device if there is damage to the housing, plug or cable.
Consult
your local authorized specialist!
Do not open the device! Repair work and replacing the rechargeable battery pack may only be carried out by electricians.
- Carry out cleaning tasks only when the mains plug is removed from the mains power!
There is a risk of short-circuit. Repairs on the device may only be carried out by commissioned and trained persons. Please contact your nearest authorized branch.
- Protect the battery against heat, e. g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.
If the battery is damaged or not used correctly. Fluids can leak from the battery. Avoid contact with these. Leaking battery fluids can lead to skin irritation or burns. Rinse off with water if you should come into contact. If the fluid gets into your eyes, make sure you get medical help.
- The lamp is not allowed to be placed on the light surface while being switched on.

Environmental Protection

- The device should not be discarded in the normal household waste under any circumstances.
- Dispose of the device via an authorized disposal center or your communal waste disposal facility. Observe the current applicable 



regulations. Contact your waste disposal facility in the event of any doubt. Dispose of all packaging materials via an environmentally friendly disposal facility. Rechargeable batteries must not be disposed of in the household waste.

Return used rechargeable batteries to your dealer or hand them in to a battery collection facility.



WARRANTY

- The device has a two years **WARRANTY** against faulty workmanship or materials. The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.

Subject to technical changes. We assume no liability for printing errors.



Steinemann AG, Wilerstrasse 2180, CH-9230 Flawil / SG
www.steinemann.ag